

Honda CRF1000 Africa Twin Pannier Rack Installation Instructions





Installation Instructions – HONDA CRF1000 Africa Twin Pannier Rack

Thank you for purchasing a BUMOT luggage system for your motorcycle. BUMOT luggage, handcrafted in Bulgaria, is designed for the rider who demands the most durable and functional luggage for their adventure touring. We're confident you will enjoy your new luggage system for years to come.


Please read through these instructions completely before starting installation. Leave all hardware loose until all components are in place and initial assembly is completed. Once everything has been installed, tighten all bolts snugly. Do not apply liquid threadlock (Loctite or similar) to any bolt which has a self-locking nut.

Installation Hardware Contents -

- Plastic part – Qty 2
- M6 x 20mm Bolt – Qty 2
- M6 Self-Locking Nut – Qty 2
- M6 Washer – Qty 4
- M8 x 20mm Bolt – Qty 2
- M8 Self – Locking Nut – Qty 4
- M8 Washer – Qty 4
- M8 x 80 Bolt – Qty 2
- Aluminum Spacer $\phi 20 \times 7\text{mm}$ – Qty 2
- Aluminum Spacer $\phi 20 \times 11\text{mm}$ – Qty 2
- Aluminum Spacer $\phi 16 \times 44 \text{mm}$ – Qty 2

Instructions -

1. Remove the both seats.
2. Remove the two bolts shown on the picture.

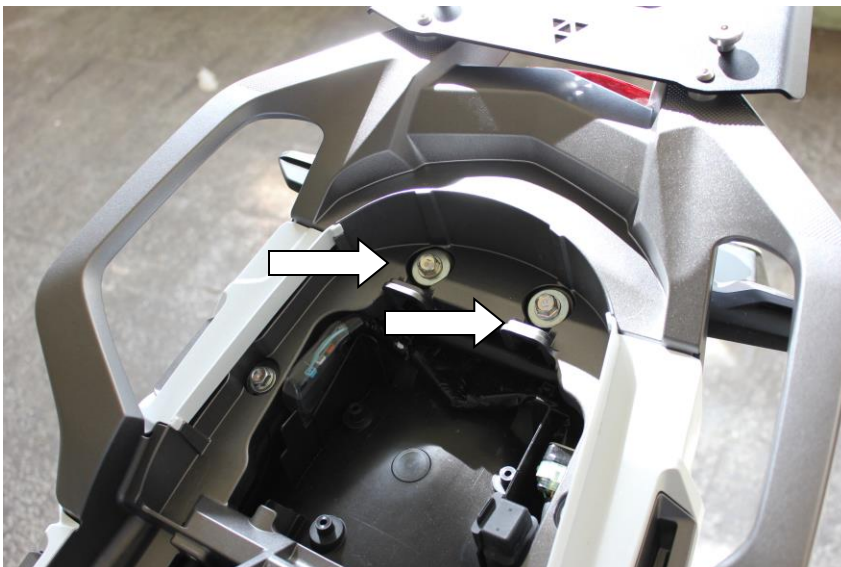

3. Use the template and drill two holes 20 mm as shown on the picture.




4. Mount the upper cross bar. Use the included aluminum spacers 16 x 44 mm and two bolts M8 x 80 mm. Do not tight them yet.



- Put the two plastic parts on the left and right side as shown on the picture.




- Remove the two bolts and passenger peg from both sides

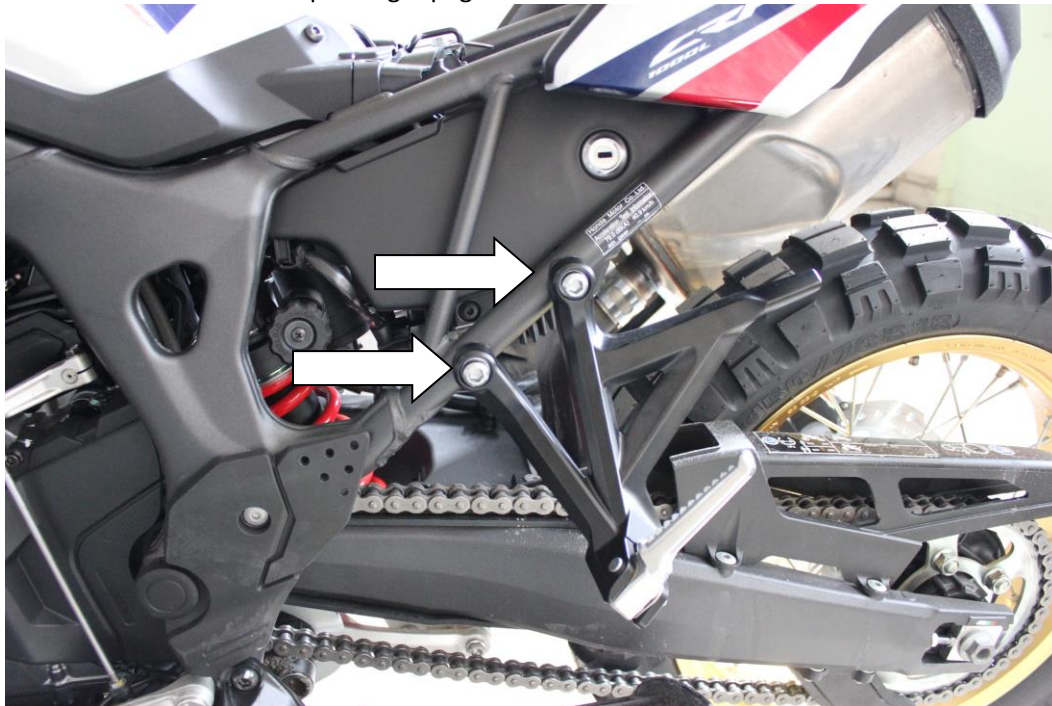

7. Attach the left side pannier rack to the plastic part and with upper cross bar with M8 x 20 mm bolts , two washers M8 and M8 Self-Locking Nut as shown on the picture. Do not tight them yet.



8. Attach the passenger peg with OEM bolts and washers and two spacers 20 x 7 mm and 20 x 11mm as shown on the picture. Tight them.

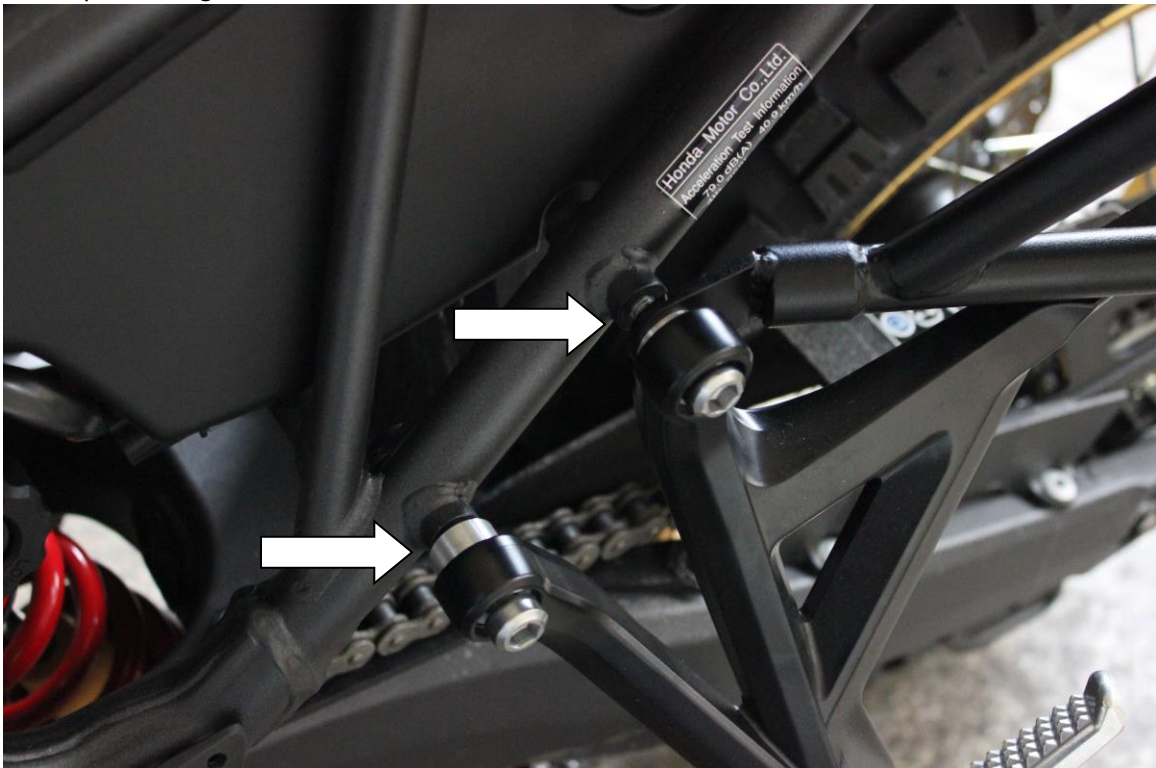


9. Install rear connecting bar with supplied M6 x 20mm bolts, M6 washers, and M6 self-locking nuts as shown below.



10. Use the same steps for the right side pannier rack

11. Tight M8 x 80 mm Bolts on the upper cross bar and then M8 x 20 mm . Tight M6 x 20mm bolts on the cross bar. Put the M8 Self – Locking Nuts and tight as shown on the picture.

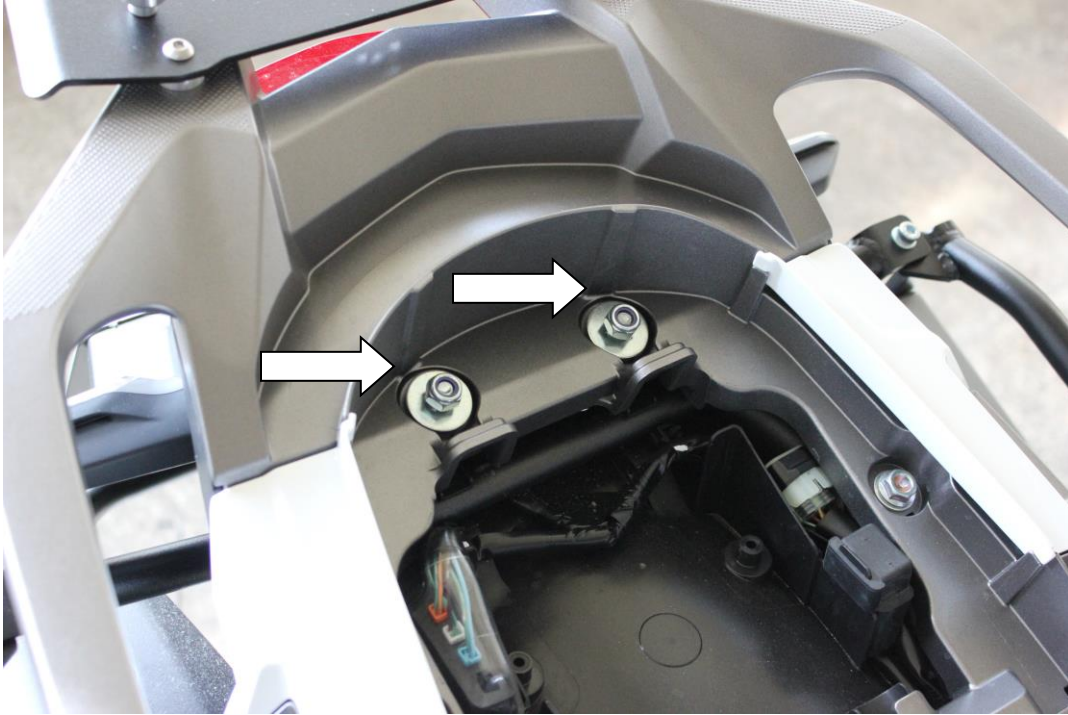

Enjoy your new BUMOT luggage system!

BUMOT Motorcycle Luggage
Ph:+359 887 649 709
www.bumot.eu
info@bumot.eu