

BMW F800GS Pannier Rack Installation Instructions



BUMOT LUGGAGE SYSTEMS

INSTALLATION INSTRUCTIONS

BMW F800GS

Thank you for purchasing Bumot Luggage Systems for your motorcycle. This luggage is handcrafted in Bulgaria and is designed for the rider who demands the most durable and functional luggage for their adventure touring. Bumot Luggage has built in several features, including hinged lids and strap attachment points, to name a couple. Powder coating, inside & out, provides a durable finish for your luggage system. We're confident you will enjoy your new luggage system for years to come.

General Instructions:

Please read through these instructions completely before starting installation. Do not tighten any bolt until the entire assembly is completed. Leave all bolts completely loose until every component is in place. Once everything has been installed, tighten all bolts snugly. After the complete system has been snugly bolted down, and any adjustments made, remove one bolt at a time. Using blue Loc-Tite © reinstall and fully tighten each bolt. **NOTE:** Do not apply Loc-Tite © to any bolt which has is a self-locking nut.

The hardware for most parts is wrapped in place where it belongs. **DO NOT** remove the wrap until ready to install that particular piece. This helps keep track of what bolts go with what part.


1. Remove seat and the original pillion hand rail.



2. Start installation with the left side. Do not tighten bolt.



3. Attach the rack on the left side left foot peg mount as shown in photo with following hardware: 2 x Clamp, 2 x washer M5, 2 x screw M 5x35

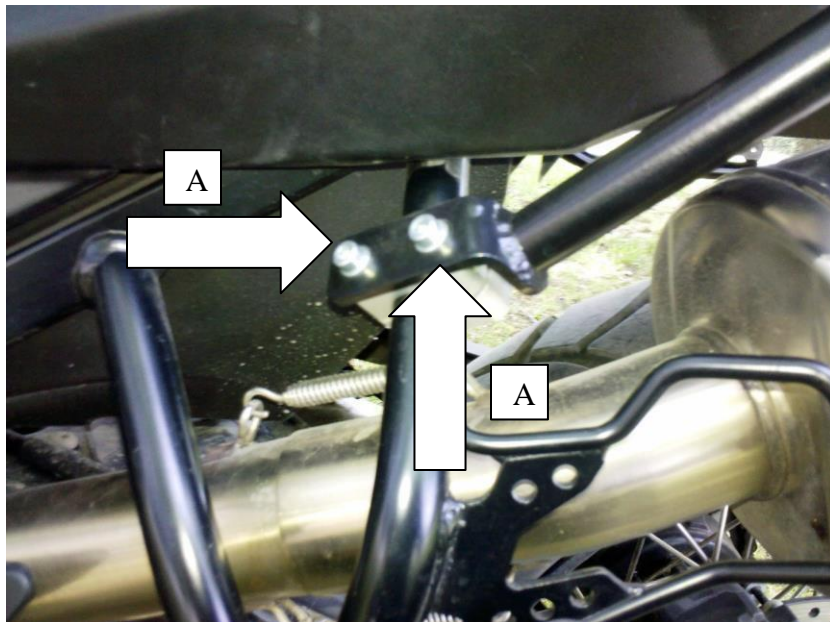


Attention!!! Do not tighten bolts, yet!

5. Start installation with the right side.

6. Put M 8x35 bolts do not tighten bolts.



5. Fit rear connection bar as shown in the photo. Tighten all bolts.

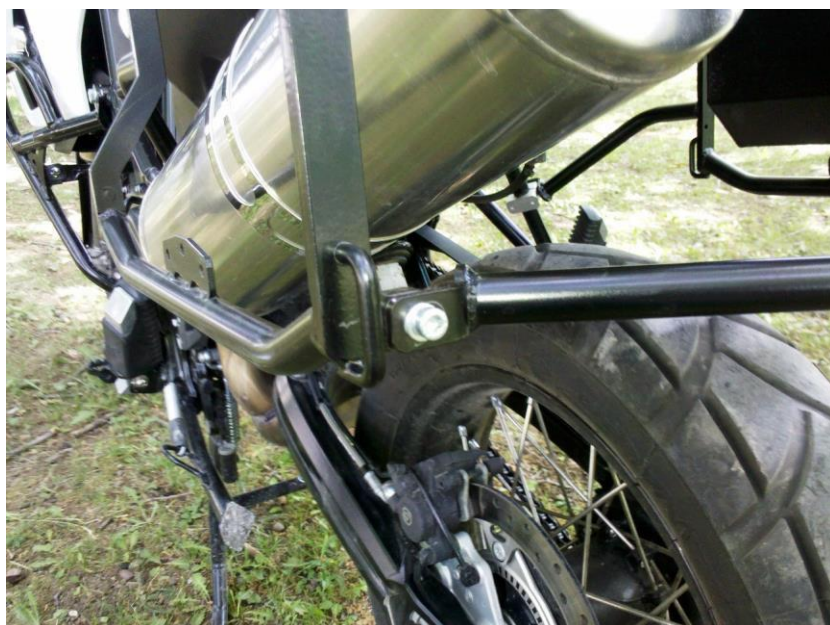

If you encounter any issues, please contact us at the e-mail or phone number listed below.

BUMOT Luggage System

Ph: +359 887 649 709

www.bumot.eu

info@bumot.eu