

# BMW F850GS Pannier Rack Installation Instructions





## Installation Instructions – BMW F850GS Pannier Rack

Thank you for purchasing a BUMOT luggage system for your motorcycle. BUMOT luggage, handcrafted in Bulgaria, is designed for the rider who demands the most durable and functional luggage for their adventure touring. We're confident you will enjoy your new luggage system for years to come.


Please read through these instructions completely before starting installation. Leave all hardware loose until all components are in place and initial assembly is completed. Once everything has been installed, tighten all bolts snugly. Do not apply liquid threadlock (Loctite or similar) to any bolt which has a self-locking nut.

### Installation Hardware Contents –

- Aluminum Spacer  $\phi 19 \times 5\text{mm}$  – Qty 2
- Aluminum Spacer  $\phi 19 \times 9\text{mm}$  – Qty 2
- Spacer ( powder coated)  $\phi 20 \times 4\text{mm}$  – Qty 2
- M8 x 40 mm Bolt –Qty 2
- M8 x 50mm Bolt –Qty 2
- M8 Washer – Qty 4
- M6 x 20mm Bolt –Qty 2
- M6 Washer – Qty 4
- M6 Self – Locking Nut – Qty 2

### Instructions -


1. Remove the seat.
2. Remove the four bolts shown on the picture.

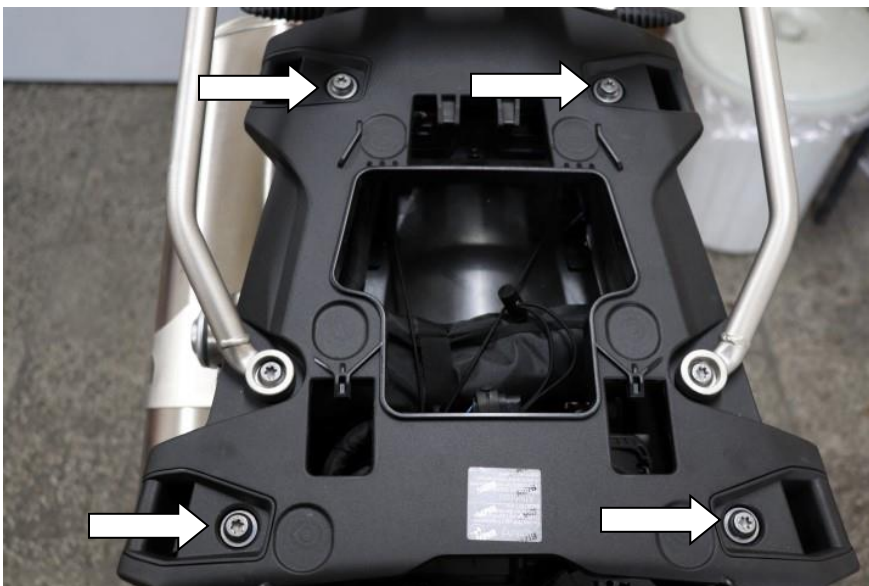


3. Remove the passenger foot peg from the both sides



4. Put the aluminum spacers  $\phi 19 \times 5 \text{ mm}$  as shown on the picture:

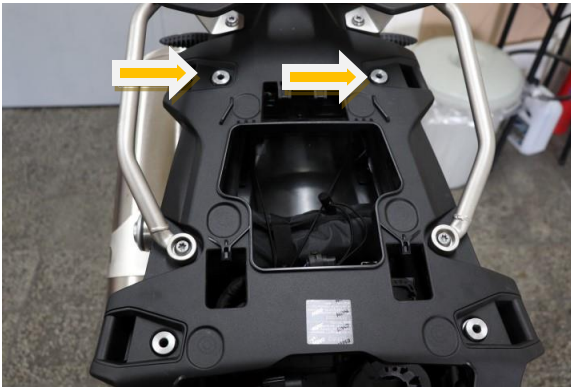


5. Put aluminum spacers  $\phi 19 \times 9 \text{ mm}$  as shown on the picture:

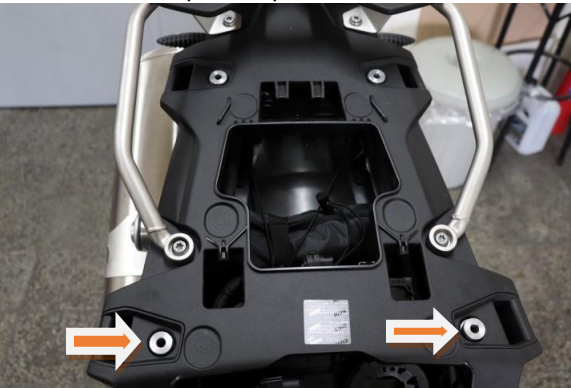

6. Attach the Pannier racks using M8 x 50mm with 2 x washers M8 as shown on the picture:



7. Attach the Pannier racks using M8 x 40 mm with 2 x washers M8 as shown on the picture:

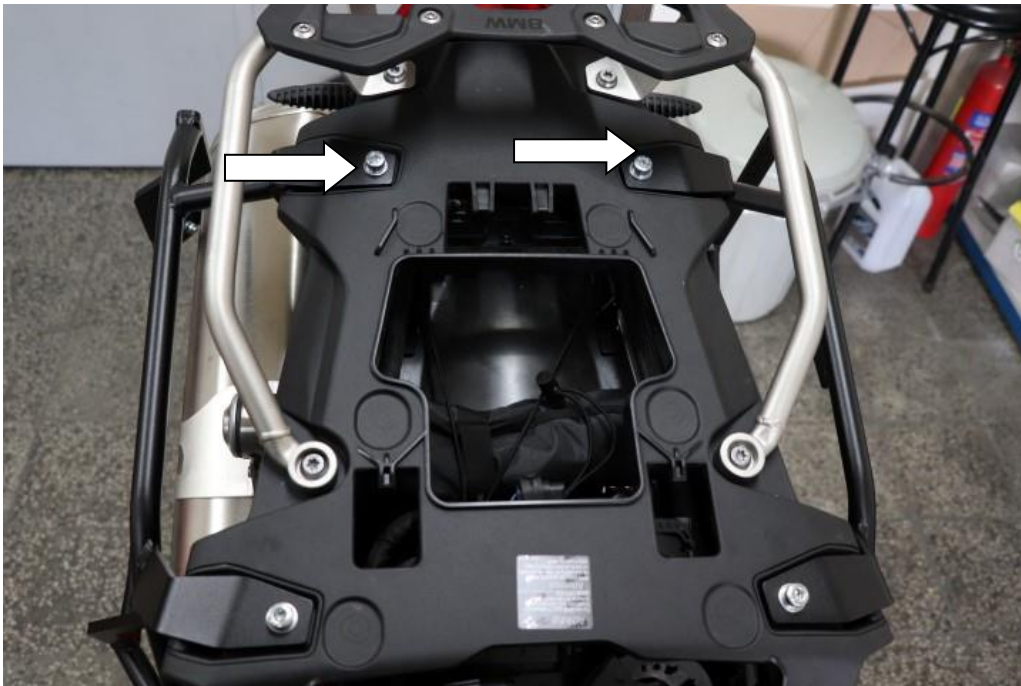

8. Attach the pannier rack to the passenger foot peg using 2 x OEM bolts and Spacer ( powder coated)  $\phi 20 \times 4\text{mm}$  as shown on the picture:



9. Use the same steps for the right side pannier rack

10. Install rear connecting bar with supplied M6 x 20mm bolts, M6 washers, and M6 self-locking nuts as shown below.



11. Tight all bolts

***Enjoy your new BUMOT luggage system!***

