

2018 Honda Africa Twin Pannier Rack Installation Instructions





Installation Instructions – 2018 HONDA Africa Twin Pannier Rack

Thank you for purchasing a BUMOT luggage system for your motorcycle. BUMOT luggage, handcrafted in Bulgaria, is designed for the rider who demands the most durable and functional luggage for their adventure touring. We're confident you will enjoy your new luggage system for years to come.

Please read through these instructions completely before starting installation. Leave all hardware loose until all components are in place and initial assembly is completed. Once everything has been installed, tighten all bolts snugly. Do not apply liquid threadlock (Loctite or similar) to any bolt which has a self-locking nut.

Installation Hardware Contents -


- Plastic part – Qty 2
- M6 x 20mm Bolt – Qty 2
- M6 Self-Locking Nut – Qty 2
- M6 Washer – Qty 4
- M8 x 20mm Bolt – Qty 2
- Inner head hex M8 x 16mm Bolt – Qty 2
- External M8 x 20mm Bolt – Qty 2
- M8 Self – Locking Nut – Qty 2
- M8 Washer – Qty 4
- M8 Nut 24mm- Qty 2
- Spacer 4mm – Qty 2

Instructions -

1. Remove the both seats.
2. Remove the passenger foot pegs




3. Remove the four bolts and grab handle as shown on the picture

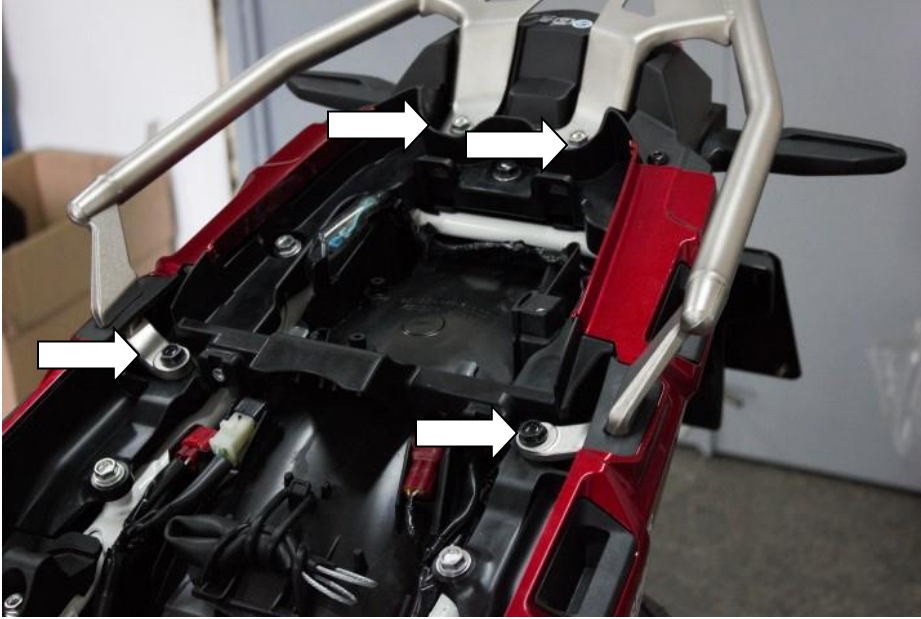

4. Remove the two bolts as shown on the picture and plastic cover




5. Disconnect the plug from the tail light and remove the two nuts and head washers as shown on the picture

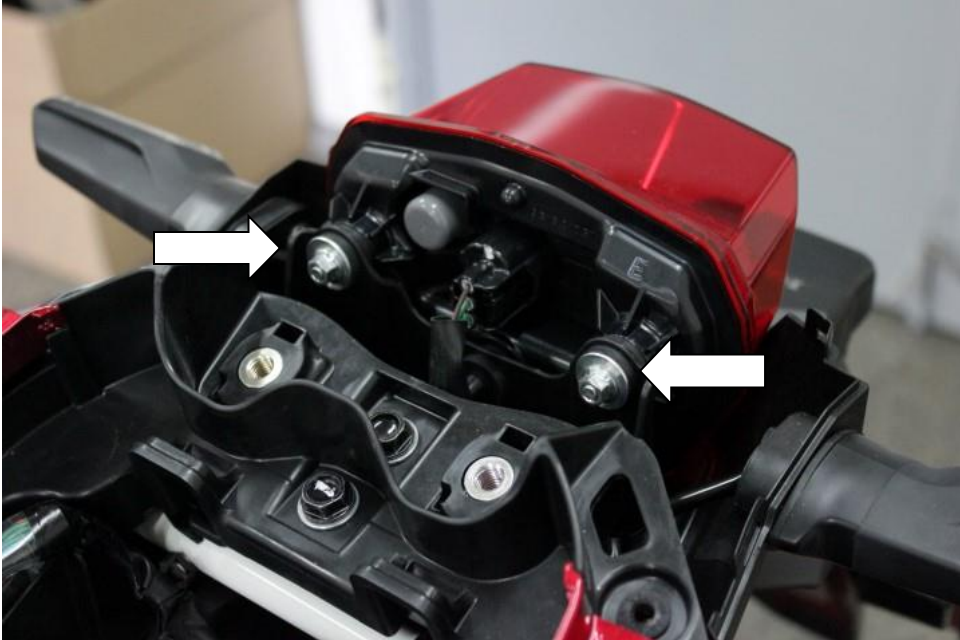


Remove the tail light - Rotate it up and pull



6. Remove the four bolts as shown on the picture.

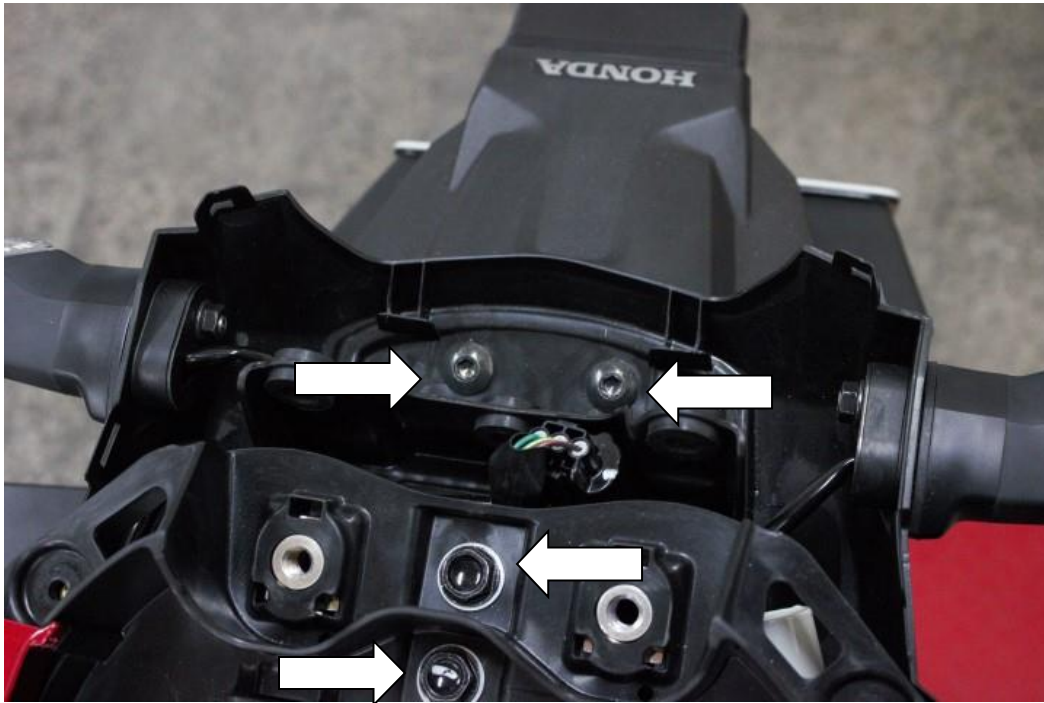


7. Remove the two bolts under the mud guard and two nuts as shown on the picture

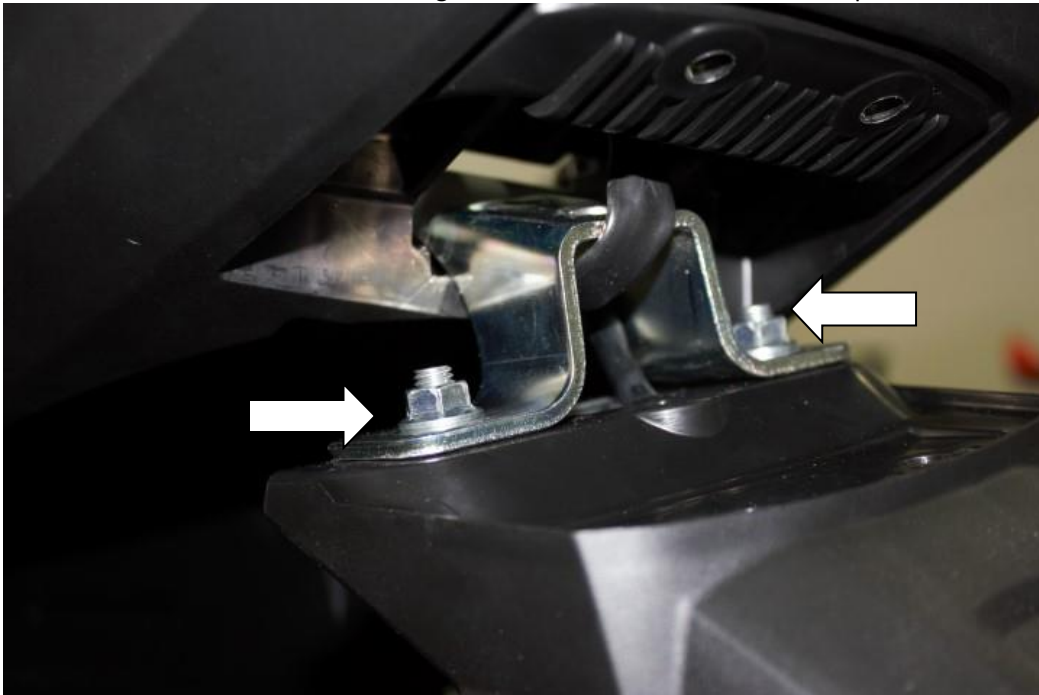

- Put the **External M8 x 20 mm Bolt** on the top of the bracket and M8 Nut 24mm under the mud guard as shown on the picture . Apply liquid threadlock (LocTite 243) and tight them




8. Attach the mud guard with the OEM bolts as shown on the picture. Tight them.

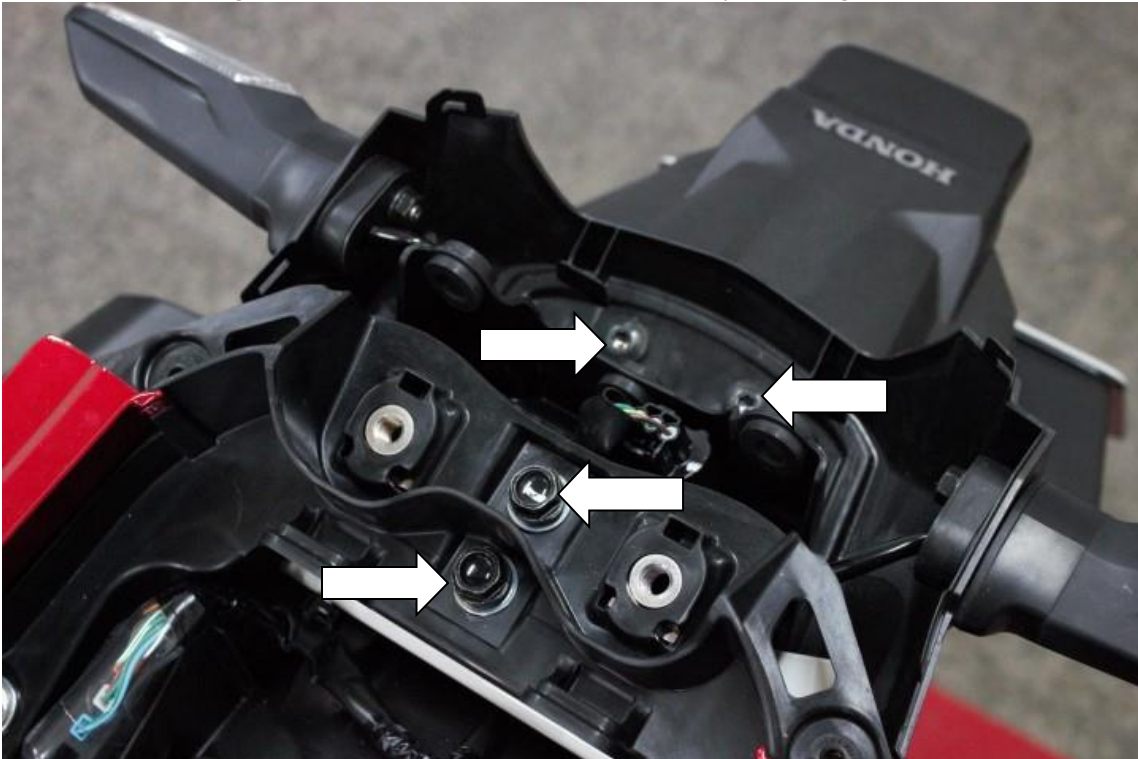

Mount the tail light and plastic cover on the top of the tail. Mount the grab handle on the bike.

9. Attach the upper cross bar with **Inner head hex M8 x 16mm** Bolts .Keep the **right bolt** untighten as shown on the picture . The **left bolt** will be added as soon as the left frame is attached.

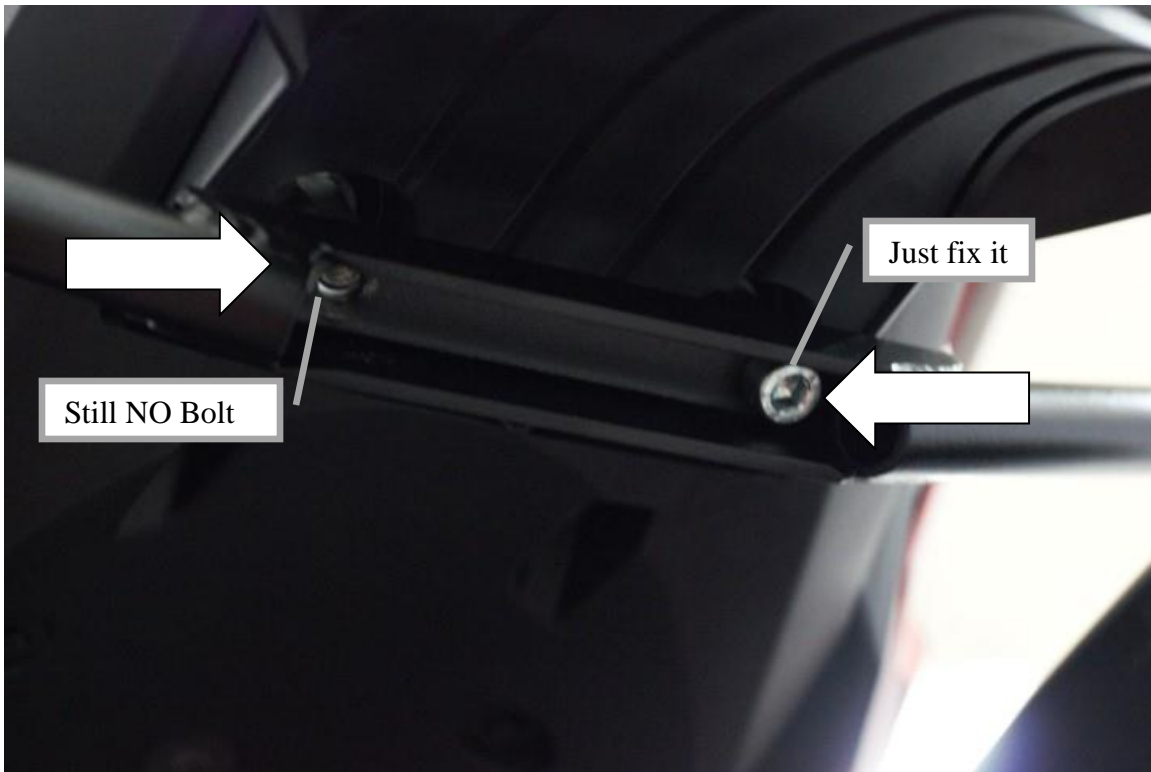

10. Put the plastic parts on both sides as shown on the picture



11. Attach the pannier racks on the both sides as shown on the picture:



12. Attach the passenger foot pegs with OEM bolts and spacer 4mm as shown on the picture . Still do not tight them.



Put the remain M8 x 16 bolt from position 9 and tight them

13. Attach the pannier frame to the upper cross bar with M8 x 20 mm as show on the picture:



14. Attach the cross bar with M6 x 20mm as shown on the picture:



Tight all bolts.

Enjoy your new BUMOT luggage system!

BUMOT Motorcycle Luggage
Ph:+359 887 649 709
www.bumot.eu
info@bumot.eu