

# Honda CRF1000 Africa Twin Radiator Guards Installation Instructions





## Installation Instructions – Radiator Guards HONDA CRF1000L Africa Twin

Thank you for purchasing a BUMOT parts for your motorcycle.


Please read through these instructions completely before starting installation. Leave all hardware loose until all components are in place and initial assembly is completed. Once everything has been installed, tighten all bolts snugly. Do not apply liquid threadlock (Loctite or similar) to any bolt which has a self-locking nut.

### Installation Hardware Contents -

- M 5 x 25mm Bolts – Qty 2
- M8 x 20mm Bolts – Qty 1
- M5 Washers – Qty 2
- M8 Washers – Qty 2
- 10 mm Spacers – Qty 2

### Instructions –


1. Remove the two OEM bolts and washers.

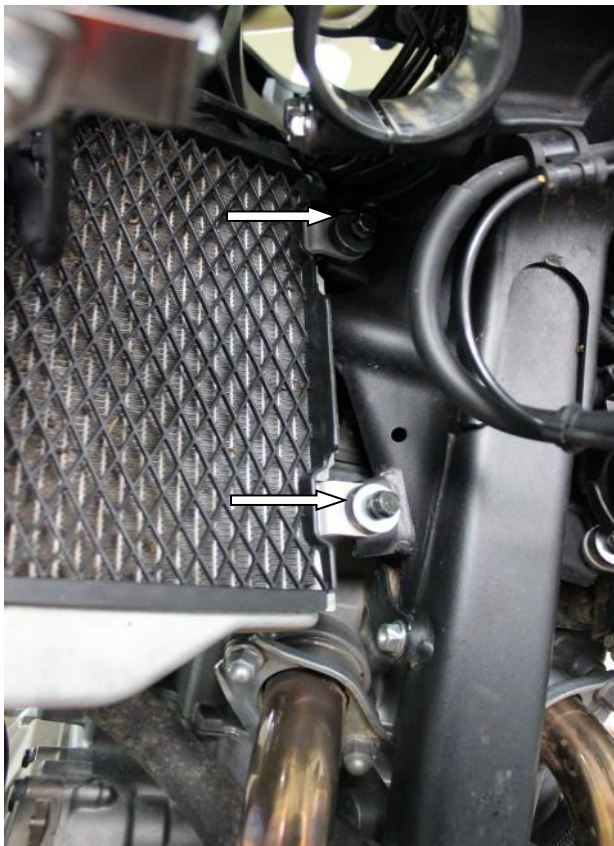

2. Remove the three OEM bolts and washers.




3. Remove the screw which is showed on the picture below:

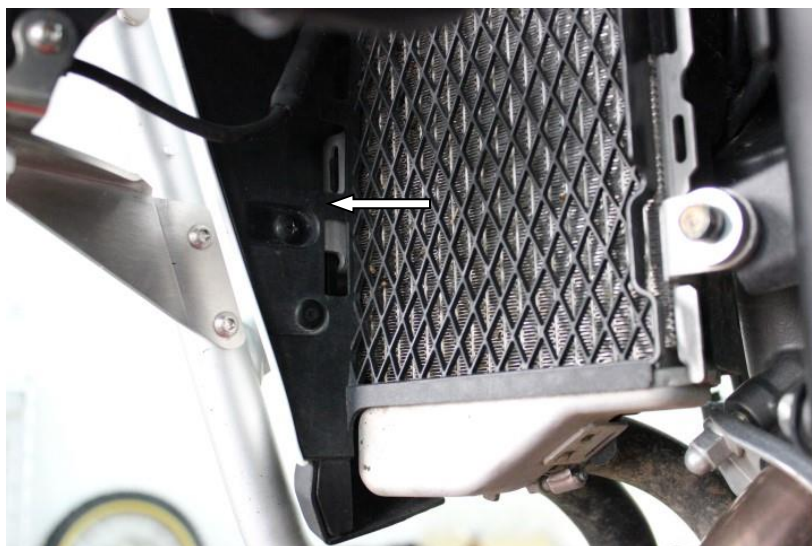


4. The same on the right side:



5. Attach the left and right rad guards with the two OEM bolts M6x25 as showed on the picture:

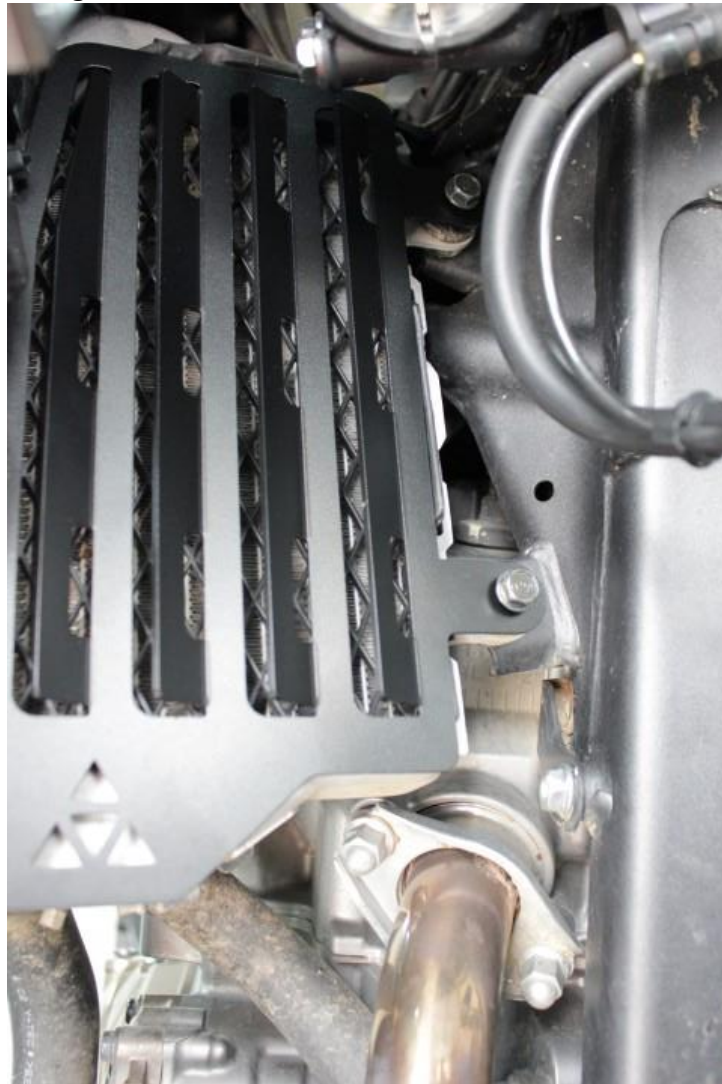


6. Attach the rad guards on both sides with bolt M5x25, washer M5 and the spacer M10 :

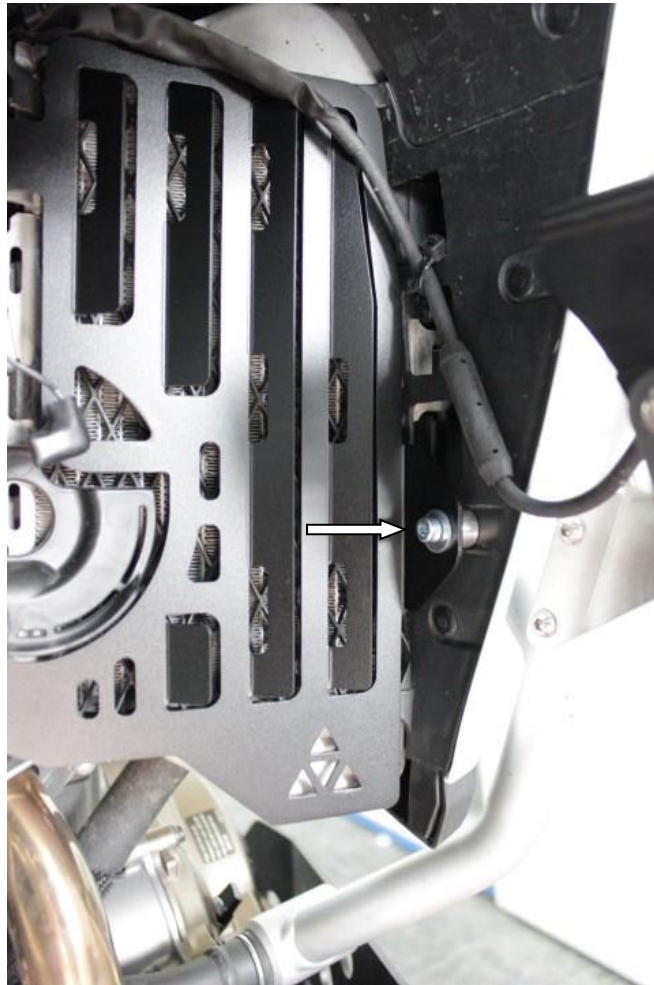

7. Attach the horn with Bolt M8x20 and 2 x M8 washers as showed on the picture below:



8. Tighten all bolts:

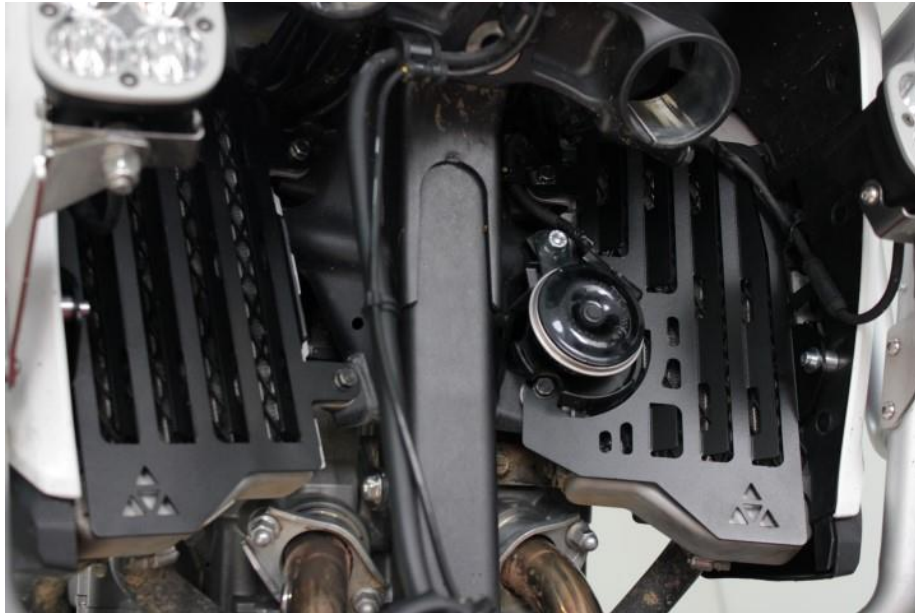

BUMOT Motorcycle Luggage

Ph:+359 887 649 709

[www.bumot.eu](http://www.bumot.eu)

[info@bumot.eu](mailto:info@bumot.eu)