

BUAOT

Motorcycle Luggage

Installation Instructions:
Suzuki V-Strom 1000

1. Remove the four bolts shown on the picture.



2. Put two spacers 24 mm on the same places.




BUAOT

Motorcycle Luggage

3. Attach the top racks using M8x60.



4. Put M6x45 bolts as shown on the picture.

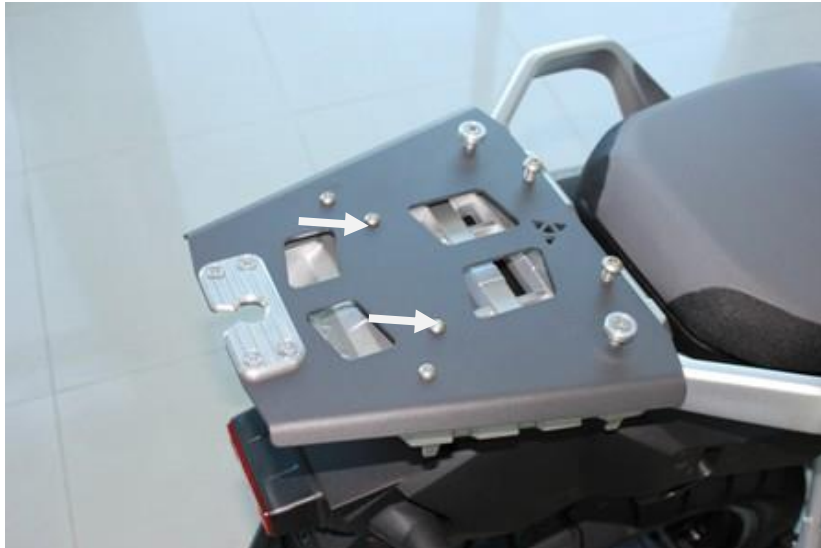

BUMOT

Motorcycle Luggage

5. Place on the bottom side as follow:
1. spacer 27,5mm
 2. the black washer
 3. Washer M6
 4. Self – Locking Nut M6



Tight All Bolts!

Max Load In Top Case – 5 kilos !

ENJOY!!!

BUMOT Motorcycle Luggage

Ph:+359 887 649 709

www.bumot.eu

info@bumot.eu